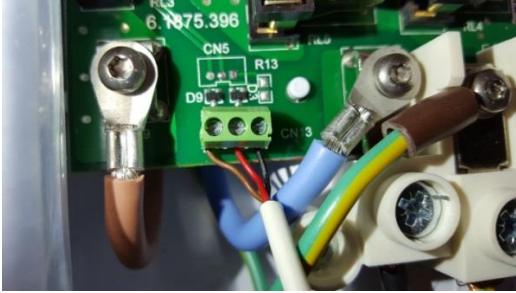



Whale Instant Match (SDP134T) Hardwired Connections & Settings to new Mira Advance Flex Extra 1.1785.005 (J09N) shower

Shower Wiring Connections	Shower Dip Switch Settings
	
<ul style="list-style-type: none"> Whale signal wire connection: left to right Brown, Red, Black. 	<ul style="list-style-type: none"> Ensure that the LK1, LK2, and LK3 dip switches are set to OFF. Dip switches found on rear of front cover.

Instant Match Transformer (755.549)	
<p>Jumper settings 10 Seconds Over run 'Mira Advance Extra Wired' Setting</p>	
